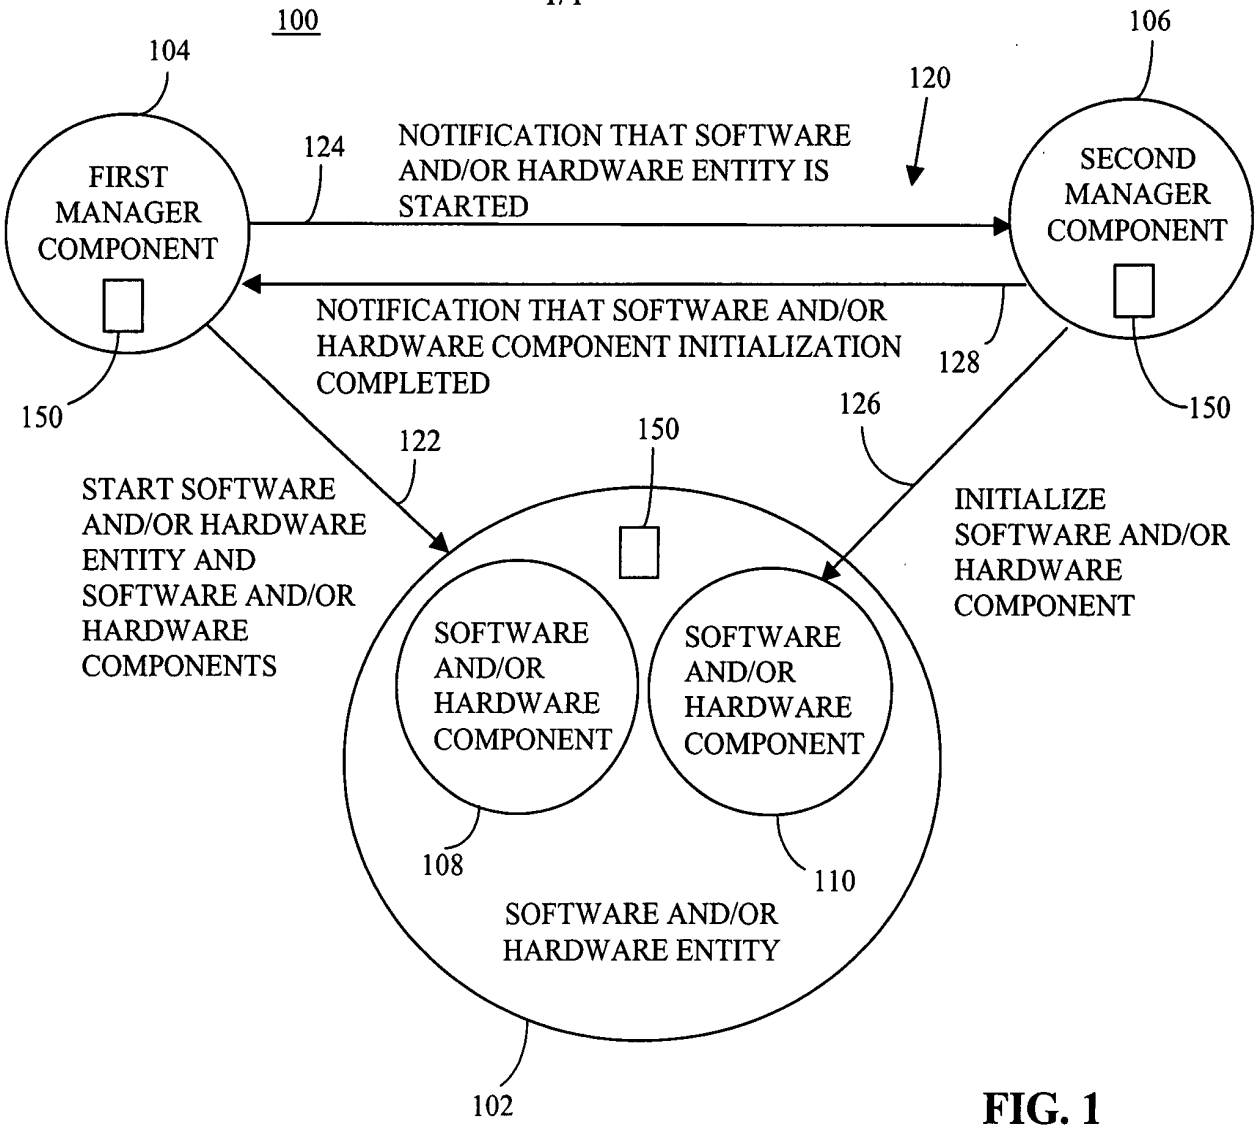
100
104
106
120
FIRST MANAGER COMPONENT
124
NOTIFICATION THAT SOFTWARE AND/OR HARDWARE ENTITY IS STARTED
SECOND MANAGER COMPONENT
NOTIFICATION THAT SOFTWARE AND/OR HARDWARE COMPONENT INITIALIZATION COMPLETED
128
150
150
126
122
150
START SOFTWARE AND/OR HARDWARE ENTITY AND SOFTWARE AND/OR HARDWARE COMPONENTS
INITIALIZE SOFTWARE AND/OR HARDWARE COMPONENT
SOFTWARE AND/OR HARDWARE COMPONENT
SOFTWARE AND/OR HARDWARE COMPONENT
108
110
SOFTWARE AND/OR HARDWARE ENTITY
102

FIG. 1